

PAGE 10 SETTINGS

IF YOU NEED TO CHANGE THE SYSTEM SWITCH SETTINGS, PRESS THE "TIME" BUTTON BUT DO NOT PRESS ANY BUTTONS WHEN PROMPTED TO "ADJUST TIME". THE DISPLAY WILL BEGIN STEPPING THROUGH THE EIGHT (8) SYSTEM SWITCH SETTINGS, ONE EVERY TWO SECONDS, STARTING WITH "PRINT SEIKO". TO CHANGE THE DISPLAYED SWITCH SETTING, PRESS THE "TIME" BUTTON TO TOGGLE FROM ON TO OFF OR FROM OFF TO ON.

SYSTEM SWITCH FUNCTIONS:

PRINT SEIKO	<u>OFF</u>	DARKER PRINTING IF ON
REMOTE MONITOR	<u>OFF</u>	PRINTS ERROR MESSAGES
PATIENT ALARM	<u>ON</u>	BEEP ALERTING OPERATOR
DISPLAY TEST	<u>OFF</u>	TEST RESULTS TO DISPLAY
TEST MEMORY	<u>ON</u>	STORES TEST RESULTS
ENGLISH DISPLAY	<u>ON</u>	ENGLISH LANGUAGE
PRINT FORM	<u>OFF</u>	P.C. PRINTER INFO
CUSTOM MODE	<u>OFF</u>	ON = 8KHZ NOT TESTED

AFTER CHANGING ANY OF THE SWITCH SETTINGS, A CONFIRMATION MESSAGE "SYSTEM SETTINGS CHANGE?" WILL BE DISPLAYED. PRESS THE "TIME" BUTTON WITHIN TWO SECONDS TO LOCK IN THE CHANGES YOU'VE JUST MADE. KEEP PRESSING UNTIL "CHANGES ENTERED" IS DISPLAYED.